


Pixini

BENICE

ASSEMBLY INSTRUCTION

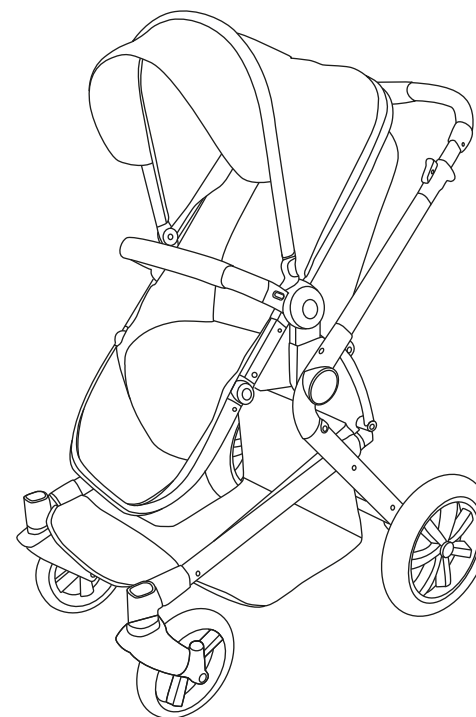

Pixini GmbH
Lange Straße 103c, 79183 Waldkirch, Deutschland
Tel.: +49 8920004950 - Mail: info@pixini.eu

I. PARTS LIST:



IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE USE. YOUR CHILD'S SAFETY MAY BE AFFECTED IF YOU DO NOT FOLLOW THESE INSTRUCTIONS. MAKE SURE YOU UNDERSTAND THIS MANUAL INSTRUCTIONS TO USE THIS PRODUCT CORRECTLY. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

16. Do not put or use the vehicle in a wet, cold or high-temperature place.
17. Be particularly careful when you are installing or folding the stroller with a child nearby.
18. Do not use it in dangerous place such as an uneven road or near fire place.
19. Any problems or requirements, contact your local retailer. They will address them as soon as possible.
20. To avoid injury ensure that your child is kept away when unfolding and folding this product.
21. Do not let your child play with this product.
22. Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
23. This product is not suitable for running or skating.
24. Only replacement parts supplied or recommended by the manufacturer/distributor shall be used.
25. Use a harness as soon as your child can sit unaided.
26. No additional mattress shall be added unless recommended by the manufacturer.
27. For car seats used in conjunction with a chassis, this vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot or bed.
28. The handrail must not be used as a carrying handle.
29. The parking brake shall be engaged when placing and removing the children.

WARNING

Be sure to read the following before you use this stroller.

1. This stroller is to be used for one child only.
2. Executive standard: EN1888-1:2018+A1:2022.
3. Regular cleaning and maintenance are necessary.
4. Always use the seat belt while child is in the stroller.
5. Child should never be left unattended! Always keep child in view.
6. Use only parts and accessories approved by the manufacturer.
7. Always set brakes when the stroller is not being pushed.
8. Keep the stroller away from fire or any heat source.
9. Do not overload the basket (3KG).
10. Don't allow child to climb unassisted into or stand on stroller.
11. Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.
12. Keep packaging materials, such as plastic or waterproof wrappings, away from child to avoid suffocation.
13. Do not use the stroller when child's weight and height is over the normal load. It makes stroller unstable.
14. The seat mode is suitable for children from 6 months to 3 years or up to 15 kg, whichever comes first; This seat mode is not suitable for children under 6 months; The cot mode is not suitable for children over 6 months.
15. Regularly inspect all locking devices to ensure perfect product maintenance. Ensure that all the locking devices are engaged before use.

DRAWINGS IN THIS MANUAL ARE FOR ILLUSTRATION PURPOSES ONLY-ACTUAL PRODUCT MAY VARY.
MANUFACTURER RESERVES THE RIGHT TO CHANGE ANY SPECIFICATION OR FEATURES WITHOUT PRIOR NOTICE.

II. CARTON CONTENTS:


Please check if all those parts are included when you opened the carton, if there is any missing parts, please contact your local retailer.

		
FRONT WHEEL x 2PCS	REAR WHEEL x 2PCS	FRONT HANDRAIL x 1PC
		
STROLLER FRAME x 1PC	SEAT UNIT + FOOT COVER + CANOPY X 1PC	PRAM BODY X 1PC

III. HOW TO ASSEMBLE THE STROLLER:

1. How to open the frame:


According to Fig 1, release the folding hook, which keeps the stroller closed. Then lift up the handle as the arrow shown on Fig 2/3, the stroller will be opened fully when you hear a CLICK you hear a CLICK (see Fig 3).

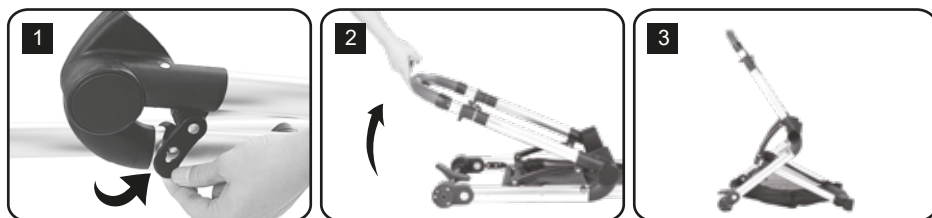

2. Assemble the wheels:

Assemble front wheel: as the show on Fig 4, Fix the front wheel axles into front socket, it is fixed when you hear a CLICK.

Assemble rear wheel: as displayed on Fig 5, Fix the real wheel axles into the rear socket, it is fixed when you hear a CLICK.

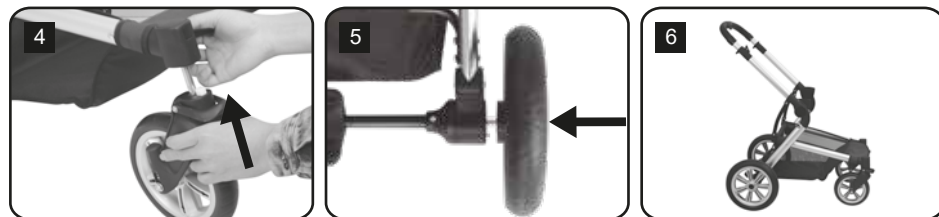


✓ **ATTENTION:** Please try to move and rotate all the wheels by your hand to make sure all the wheels are firmly fixed on wheel houses before use.

VII CARE AND MAINTENANCE:

1. This vehicle requires regular check by user to make sure moving parts remain intact. All the locking devices and the second lock are engaged before use.
2. This product can be cleaned with damp rag and usual detergents. Do not use any abrasive detergents. The cover can be removed and washed, but should be dry before reuse. Every fixed device should be clipped firmly, when reinstall it.

VI. HOW TO FOLD THE STROLLER:

1. See Fig 1, up the backrest to the top when you fold the stroller.
2. Fold the hood: pull the hood as the arrow shown on Fig 2 to fold the hood.
3. See Fig 3, press down the button on the handle, then you can pull down the handle.
4. Fold the stroller: according to Fig 4, press down the stroller-folding button ①, and pull the second folding button ② simultaneously on both side of the handle. Then the stroller will be folded automatically as the arrow shown on Fig 5
5. The stroller is folded when the hook is fixed in its position as shown on Fig 6.

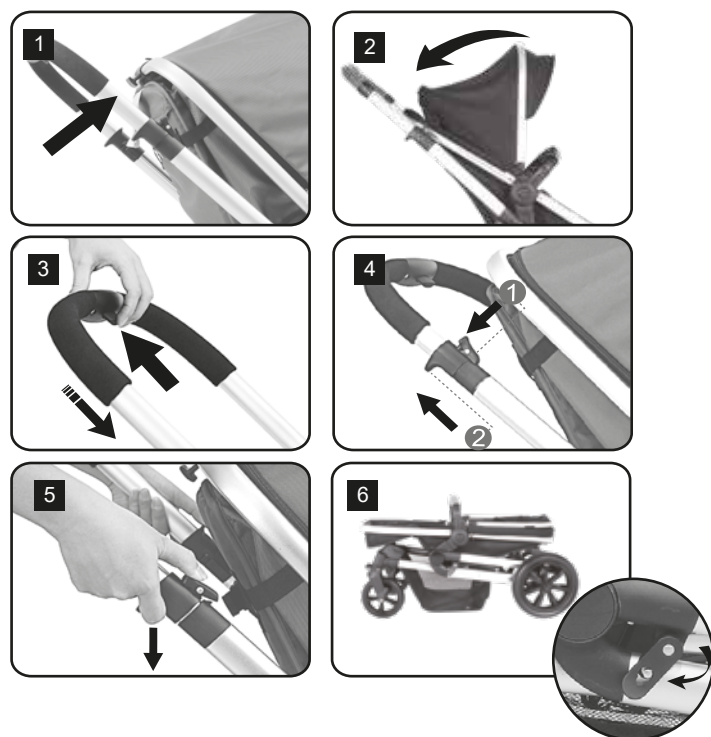

Kindly remind: in order to prevent injury, always keep your child away from the stroller while folding it.


3. Seat cloth support webbing installation:

1. The webbing through the left and right webbing buckle at the bottom of the adhesive can complete the installation, as shown in the fig 7-8.



Warning: Please keep the zipper puller align horizontal inside the zipper in the fig 9, incase the zipper free slip.


2. Plug the connecting base in the seat plastic slot in the arrow direction, when hear a "CLICK", the seat is fixed in the stroller (see Fig 10/11).
3. How to fix the front handrail: grip the handrail and press down the controlling buttons on both sides simultaneously (see Fig 12), and then fix the handrail onto both sides of stroller; it is fixed when you hear a CLICK (fig 13).
4. How to open the hood: Open the hood as the arrow shown on Fig 14. See Fig 15, the stroller is firmly opened.

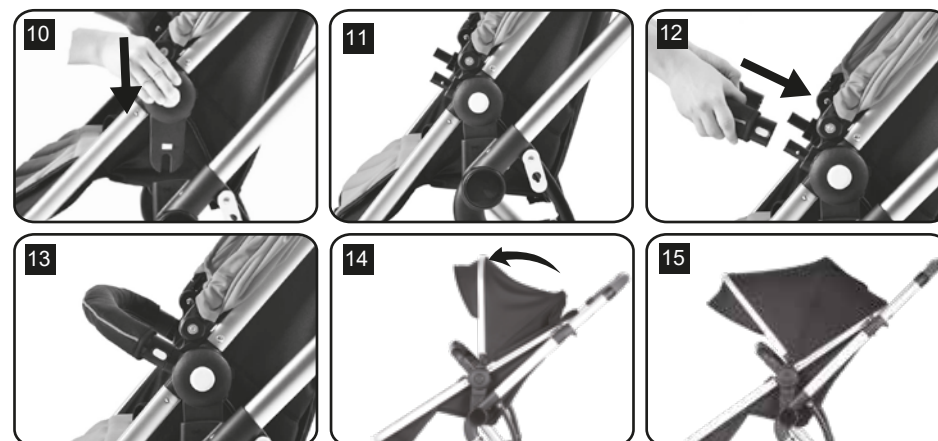


IV. FUNCTION INSTRUCTION :

1. Seat Function:

Press down the seat reversing buttons on two sides simultaneously and take out the seat, then put it on the contrary direction of stroller (see Fig 1). Be sure it is safely fixed, then the reversion is finished.

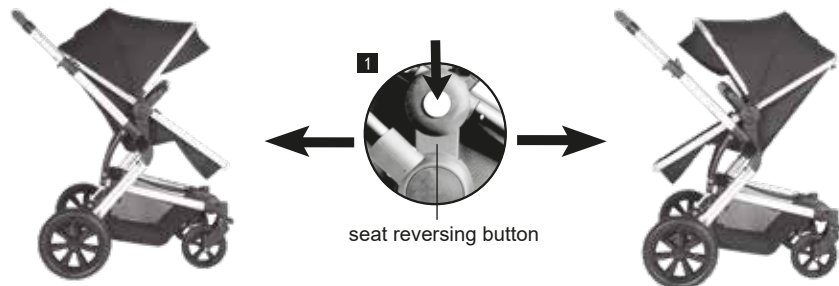

2. Pram Body Function:

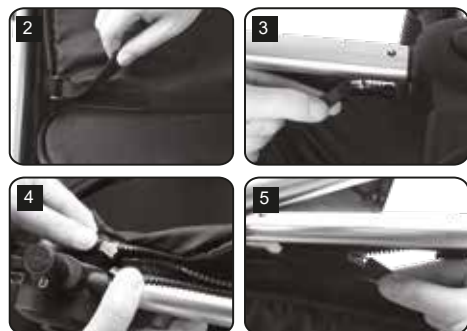

Remove the seat :
hold the puller of the front and
back zippers of the seat cloth
to remove the seat cloth from the
seat, as shown in the fig 2/3.



Install the pram body: Align the front and rear zipper puller of the pram body, insert the zipper pram body, and pull the zipper to complete the assembly of the pram body, as shown in the fig 4/5/6.


D-ring buckles fasten near to canopy, keep the pram body face to you while using it as shown in the fig 6.

Kindly remind: In order to ensure your baby safe, always keep the pram body face to you while using it (see fig 6).

V. ACCESSORIES:


1. How to use the car seat: Item No.J-B002B1:

1. Assemble the car seat: As Fig 1, put the car seat onto the seat supporting base, push down the car seat until you hear a CLICK.(See fig 2)
2. Disassemble the car seat: Raise the button a at the back of car seat to release the car seat from the stroller (See fig 3).

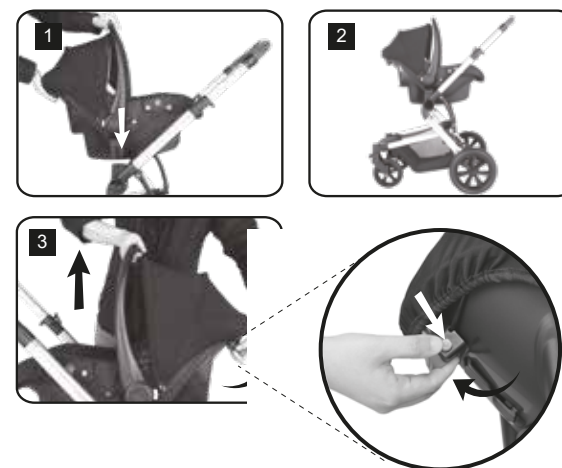

Kindly remind: In order to ensure your baby safe,
always keep the car seat face to you (see fig 2) while using it.


7. Safety Belt Assembly:

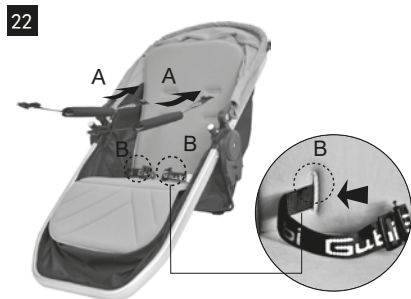



1. Pass the buckles of shoulder belt A and waist belt B through the loops located on the seat pad and the stiff board which is hidden behind the seat pad. Make sure they are attached firmly before use (see Fig 22/23).

23

HOLLOW SHEET

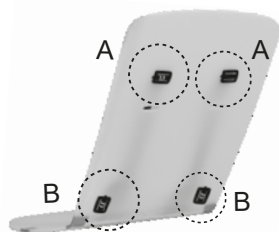


2. Pass the crotch belt through the seat pad and the stiff board which is hidden behind the seat pad as the arrow shown on Fig 24. Always make sure they are attached firmly before use. The safety belts are correctly assembled as Fig 25.

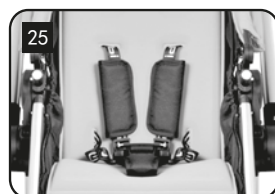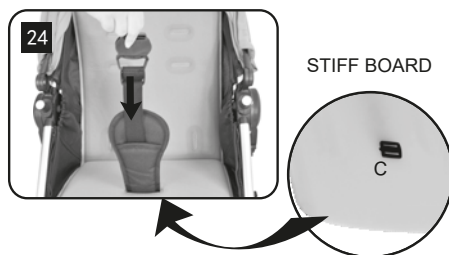


3. Seat Reclining Adjustment:

The seat can be adjusted in 4 positions.


Press down the reclining adjustment button and push up or down the seat, then the backrest is adjustable (see Fig 7).

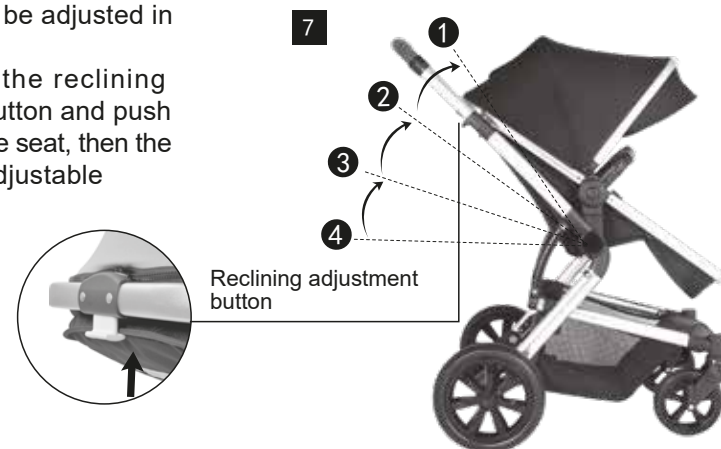

4. Handrail Function:

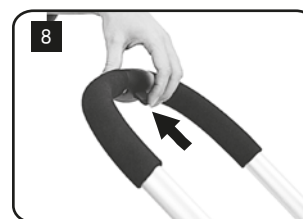


To press down the adjustable handle button in the arrow direction, the handle can be adjusted to three positions (see Fig 8/9/10/11).

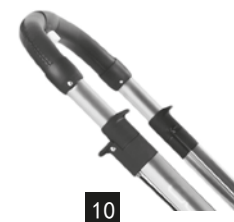

5. Wheel Function:


1. Lockable and swivel front wheel: (see fig 12/13), pull up the front wheel lock when you use the stroller in flat road, the front wheel can be swiveled freely. Press down the front wheel lock, the stroller will move forward.
2. To quickly release the front wheel: press down the small part as shown in fig 14.
3. Rear wheel brake: (see Fig 15), step on the brake pedal between the rear wheels, stroller will be in brake status, step forward on the brake pedal to release the brake.
4. Detachable rear wheels: as shown in fig 16/17: press the quick release button 1 first, then you can pull out the wheels quickly.

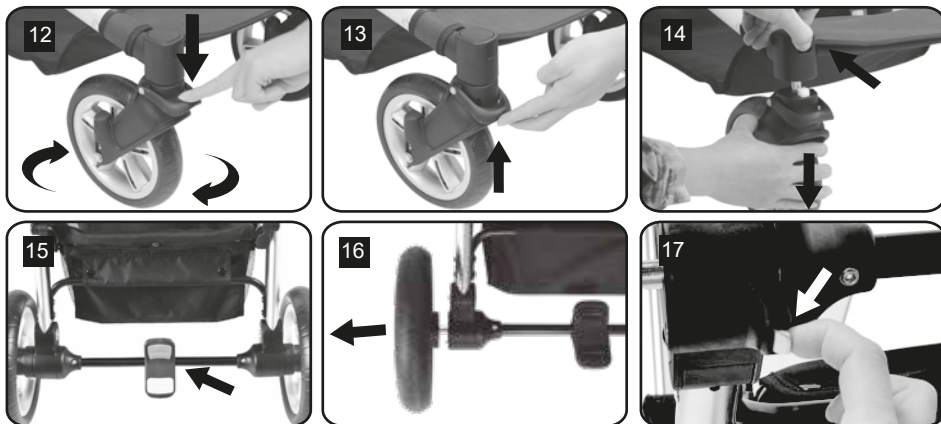

✓ Kindly remind: In order to keep the stroller moving, please lock the front wheel when you use the stroller in sand or stone road.)

6. How To Use The Safety Belt:

1. Attach the buckles: (See Fig 18), attach the buckles on the shoulder belt (G, H) on the buckles of waist belt (E, F), And then attach the waist buckles on the central buckle until you hear a CLICK (See Fig 19).
2. Release the belt: (See Fig 20) press down the central button to release the waist strap.
3. Adjust the seat belt: Adjust the shoulder and waist strap according to the size of child in comfortable position (See Fig 21).

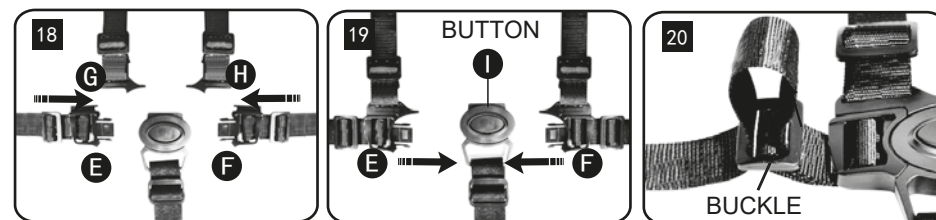

4. Adjust the height of seat belt by pulling buckles out of the seat. Then attach them into the same level, always make sure the buckles are in their positions.



✓ Kindly remind: In order to keep the stroller moving, please lock the front wheel when you use the stroller on sandy or gravel roads.)